







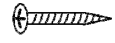





INSTALLATION

Model# B2W

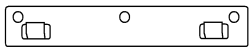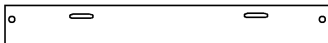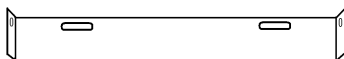


PARTS SUPPLIED

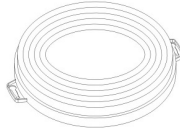
Description	Illustration	Qty.
Cooker hood		1
Chimney		2
Exhaust Pipe		1
One-way-valve		1
Wall bracket		1
Plate I		1
Plate II		1
Screw (4mm x 38mm)		7
Screw (4mm x 30mm)		2
Wall plug		7
Screw (3.8mm x 8mm)		10
Carbon filter		2

INSTALLATION (VENT INSIDE)


If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminum, flexible pipe or inflammable material with an interior diameter of 150mm)

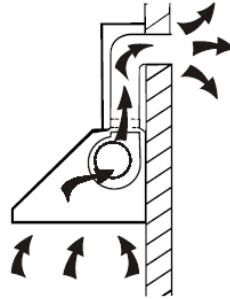


1. Before installation, turn the unit off and unplug it from the outlet.

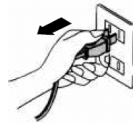

2. The cooker hood should be placed at a distance of 65~75cm above the cooking plane for best effect.

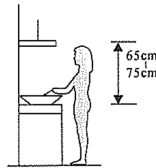


3. Drill 3 holes to accommodate the wall bracket. Screw and tighten the wall bracket onto the wall with the screws (4mm x 38 mm) and wall plugs provided.

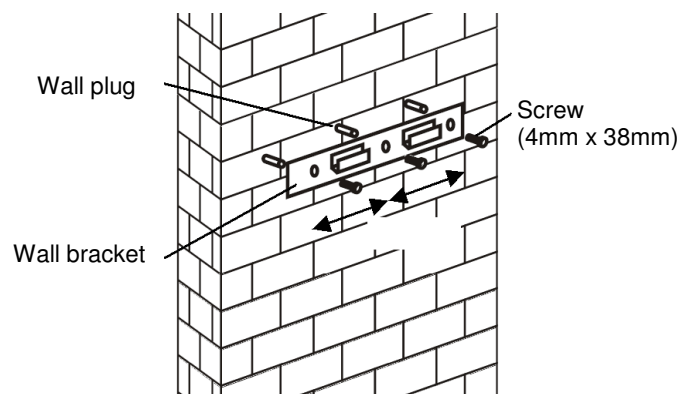


4. Drill 2 holes to accommodate plate II. Screw and tighten the bracket onto the wall with the screws (4mm x 38 mm) and wall plugs provided.
Remark: Plate II is used to fix the chimney. It is suggested that you refer to the whole installation procedure for locating the position of the plate II.

5. Leave up the cooker hood and hang onto the wall bracket hook.

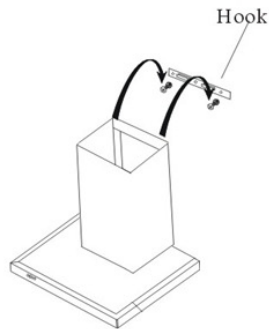

6. Fix the one-way-valve to the air outlet of the cooker hood by 4 screws (3.8mm x 8mm).


Remark: Sometimes, sponge tape covers the 4 holes. If the 4 holes are located below the sponge tape, simply insert the screw through the sponge tape. Then, attach the exhaust pipe onto the one-way-valve as shown below.

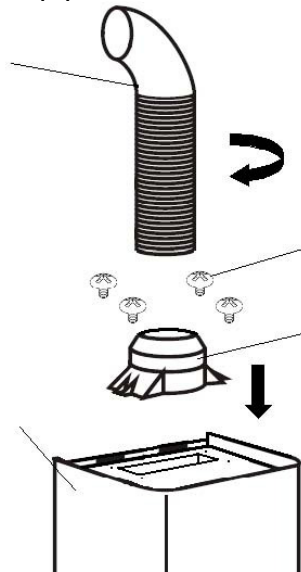

7. Adjust the height of the chimney approximately in your required height. Then install plate I on the chimney. Two screws (3.8mm x 8mm) are used. The procedure is as below.


i. Put the inner chimney into outer chimney. Then pulling out the inner chimney upwards. Adjust to reach the height required approximately. Fine height adjustment is done later.

ii. Install plate I on the chimney

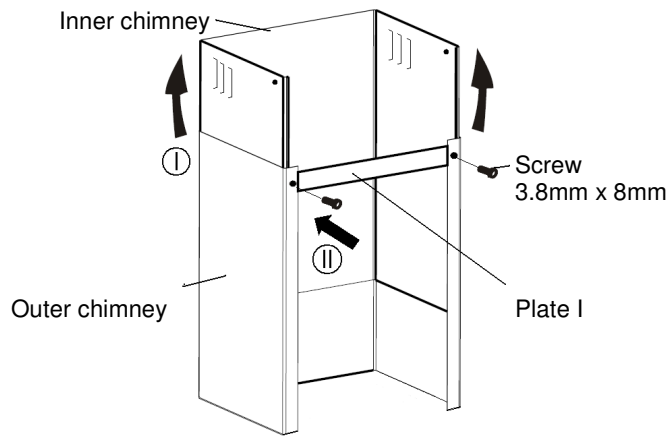


NOTE: Remember not to fix the screw too tight, so that later height adjustment can be done easily.

8. Put the chimney to the cooker hood. Fine height adjustment is done.
9. Fix the chimney to plate II. Two screws 3.8mm x 8mm are used.

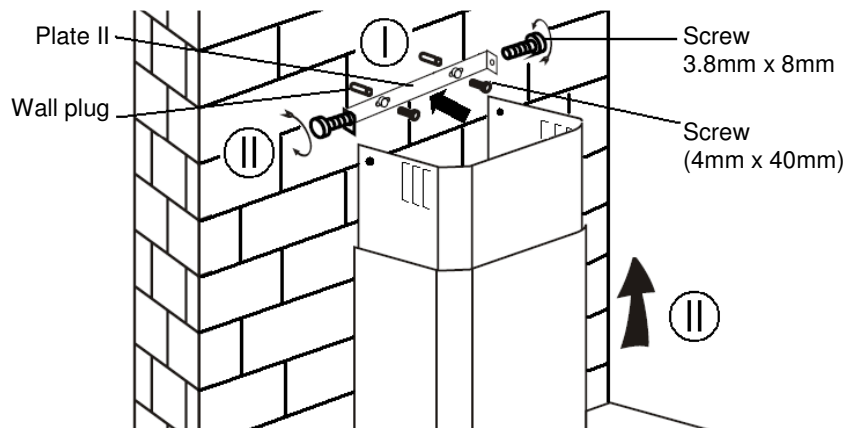


10. Fix the body with safety screw. Two screws 4mm x 30mm and two wall plugs are used.

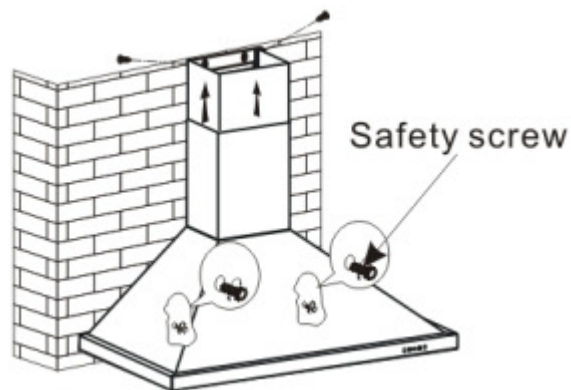


INSTALLATION (OPTIONAL FOR VENT INSIDE)

If you do not have an outlet to the outside, exhaust pipe is not required and the installation is similar to the one show in section “INSTALLATION (VENT OUTSIDE)”.

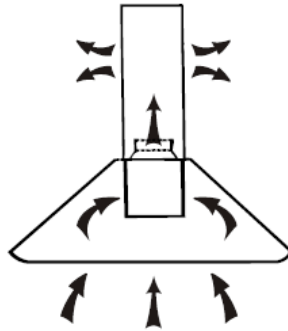


Activated carbon filter can be used to trap odors.

In order to install the activated carbon filter, the cartridge filter should be detached first. Press the lock and pull it downward.

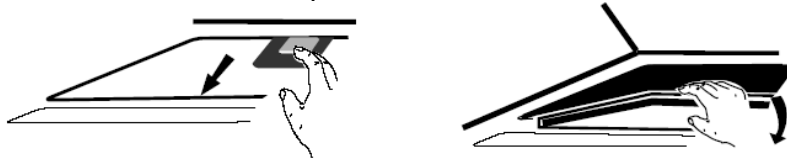

Put the activated carbon filter into the unit and turn it in anti-clockwise direction. Repeat the same on the other side.

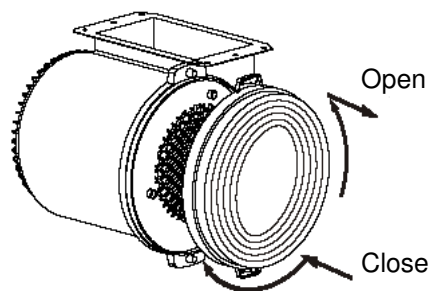

NOTE:

- Make sure the filter is securely locked. Otherwise, it would loosen and cause dangerous.
- When activated carbon filter attached, the suction power will be lowered.